

Typ 3 601 04

Škoda Octavia III. Limousine 02/2013 →
Škoda Octavia III. Combi 05/2013 →



ca ...30 min.

Milotec
AUTO-EXTRAS

Scheinwerfer-Blenden • Kryty světlometů • Headlamp covers • Couvere-phares

Montageanleitung
Montážní návod
Fitting instructions
Instructions de montage


ACHTUNG !!! Nur für Xenon Scheinwerfer !!!
POZOR !!! Určeno pouze pro Xenon světla !!!
ATTENTION !!! Only for Xenon head lamps !!!
ATTENTION !!! Seulement pour les phares de Xénon !!!



Technische Änderungen vorbehalten
Technická změna vyhrazena
Subject to technical alterations
Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:


A 1 x

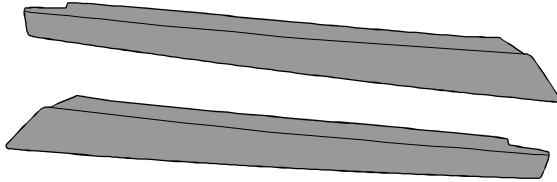

B 1 x



C 1 x

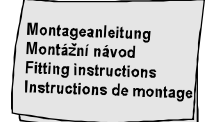

D 1 x

